


Installation for Thanner HRU DK84.1

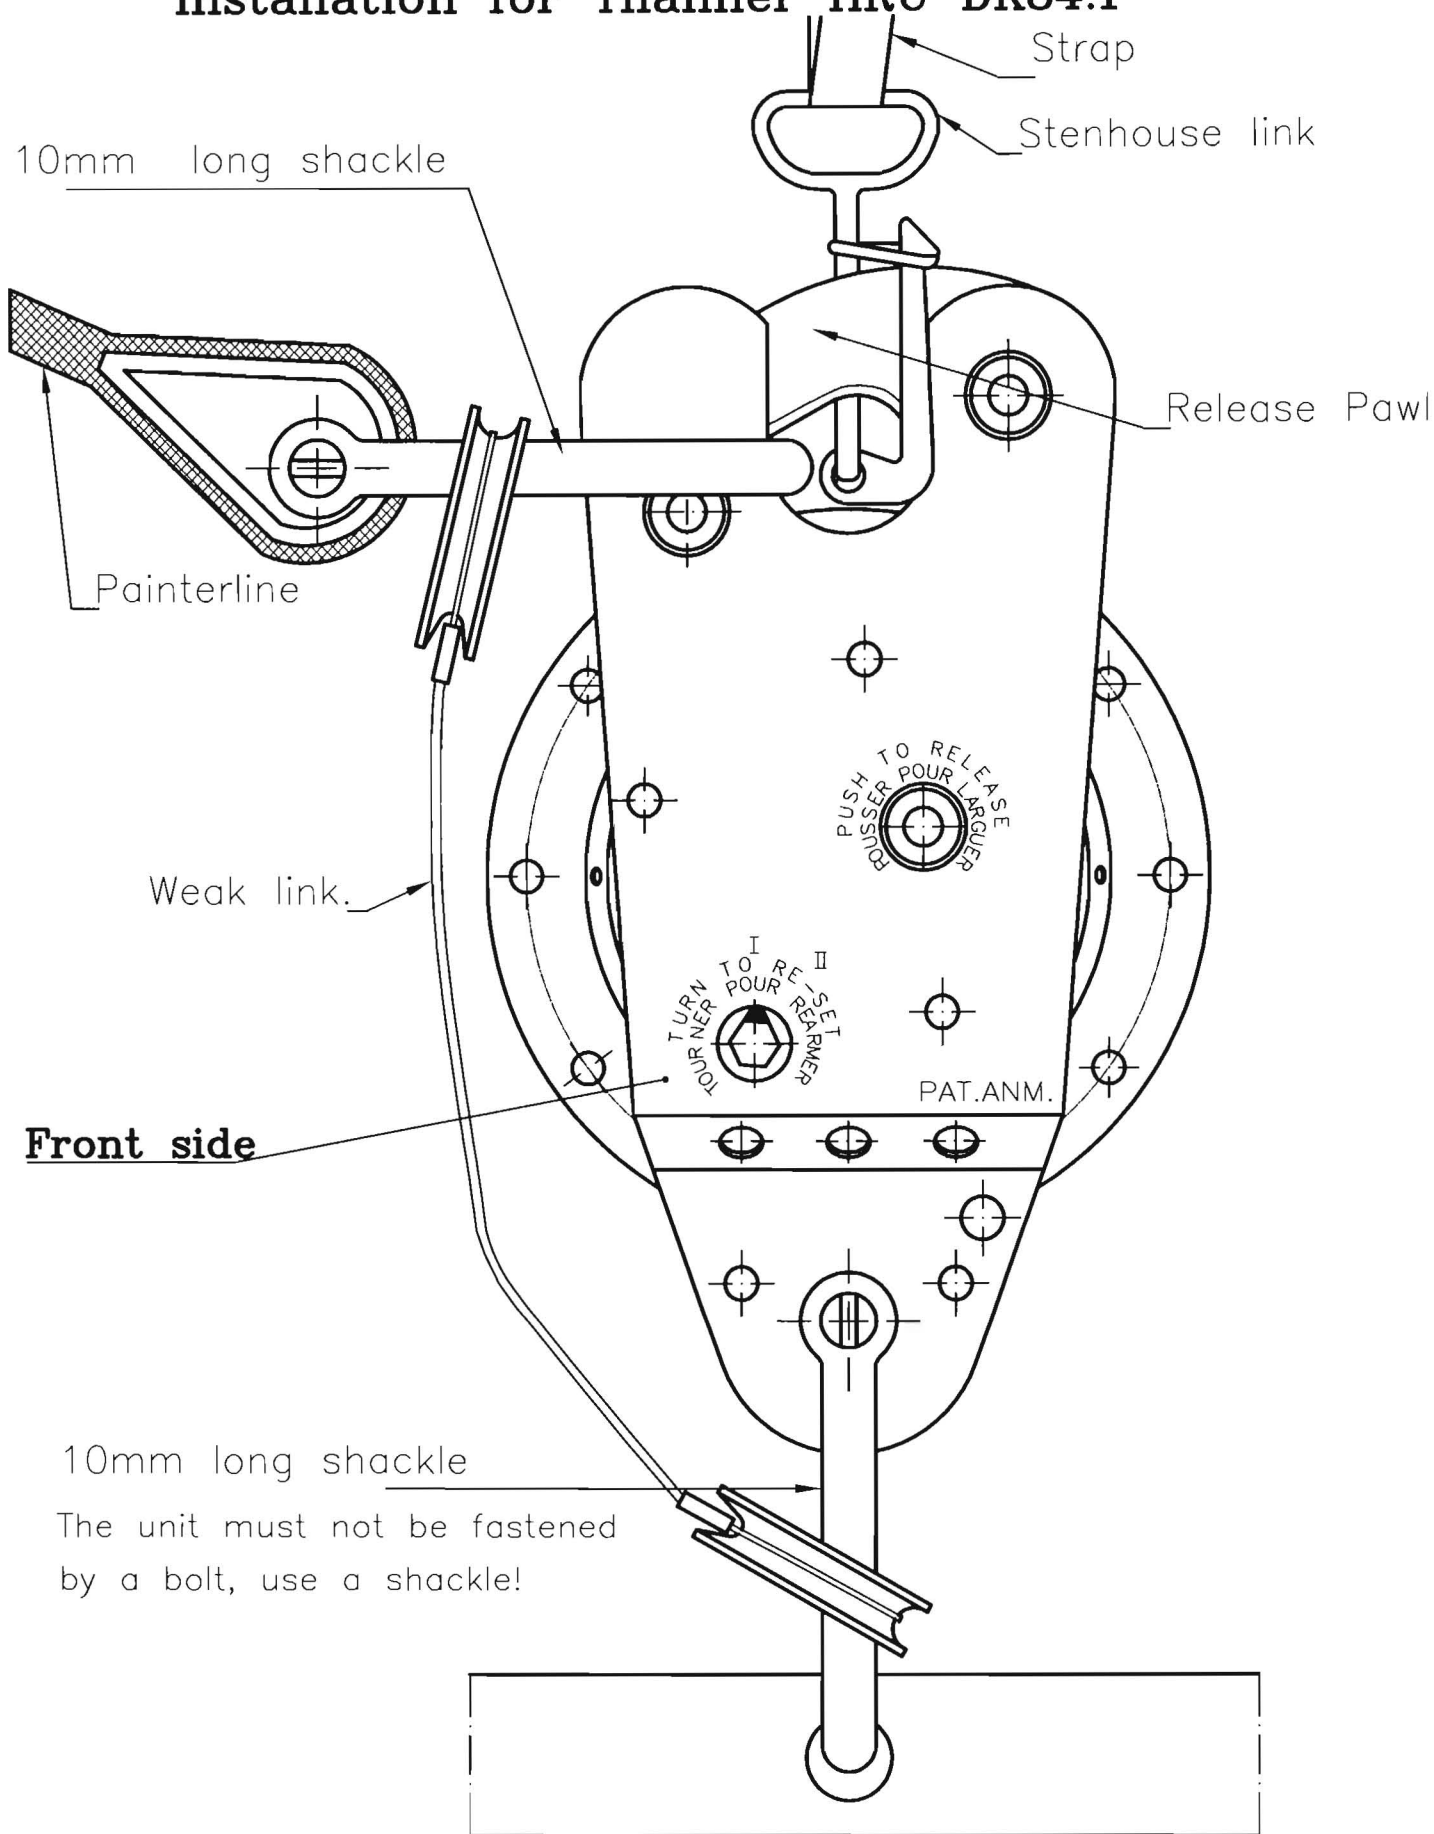

10mm long shackle

The unit must not be fastened by a bolt, use a shackle!

Important:

1. Stenhouse link must be fitted under release pawl.
2. Weak link, shackle and painterline must be connected as shown.

28 AUG 2013