


Installation of Thanner HRU DK84.1

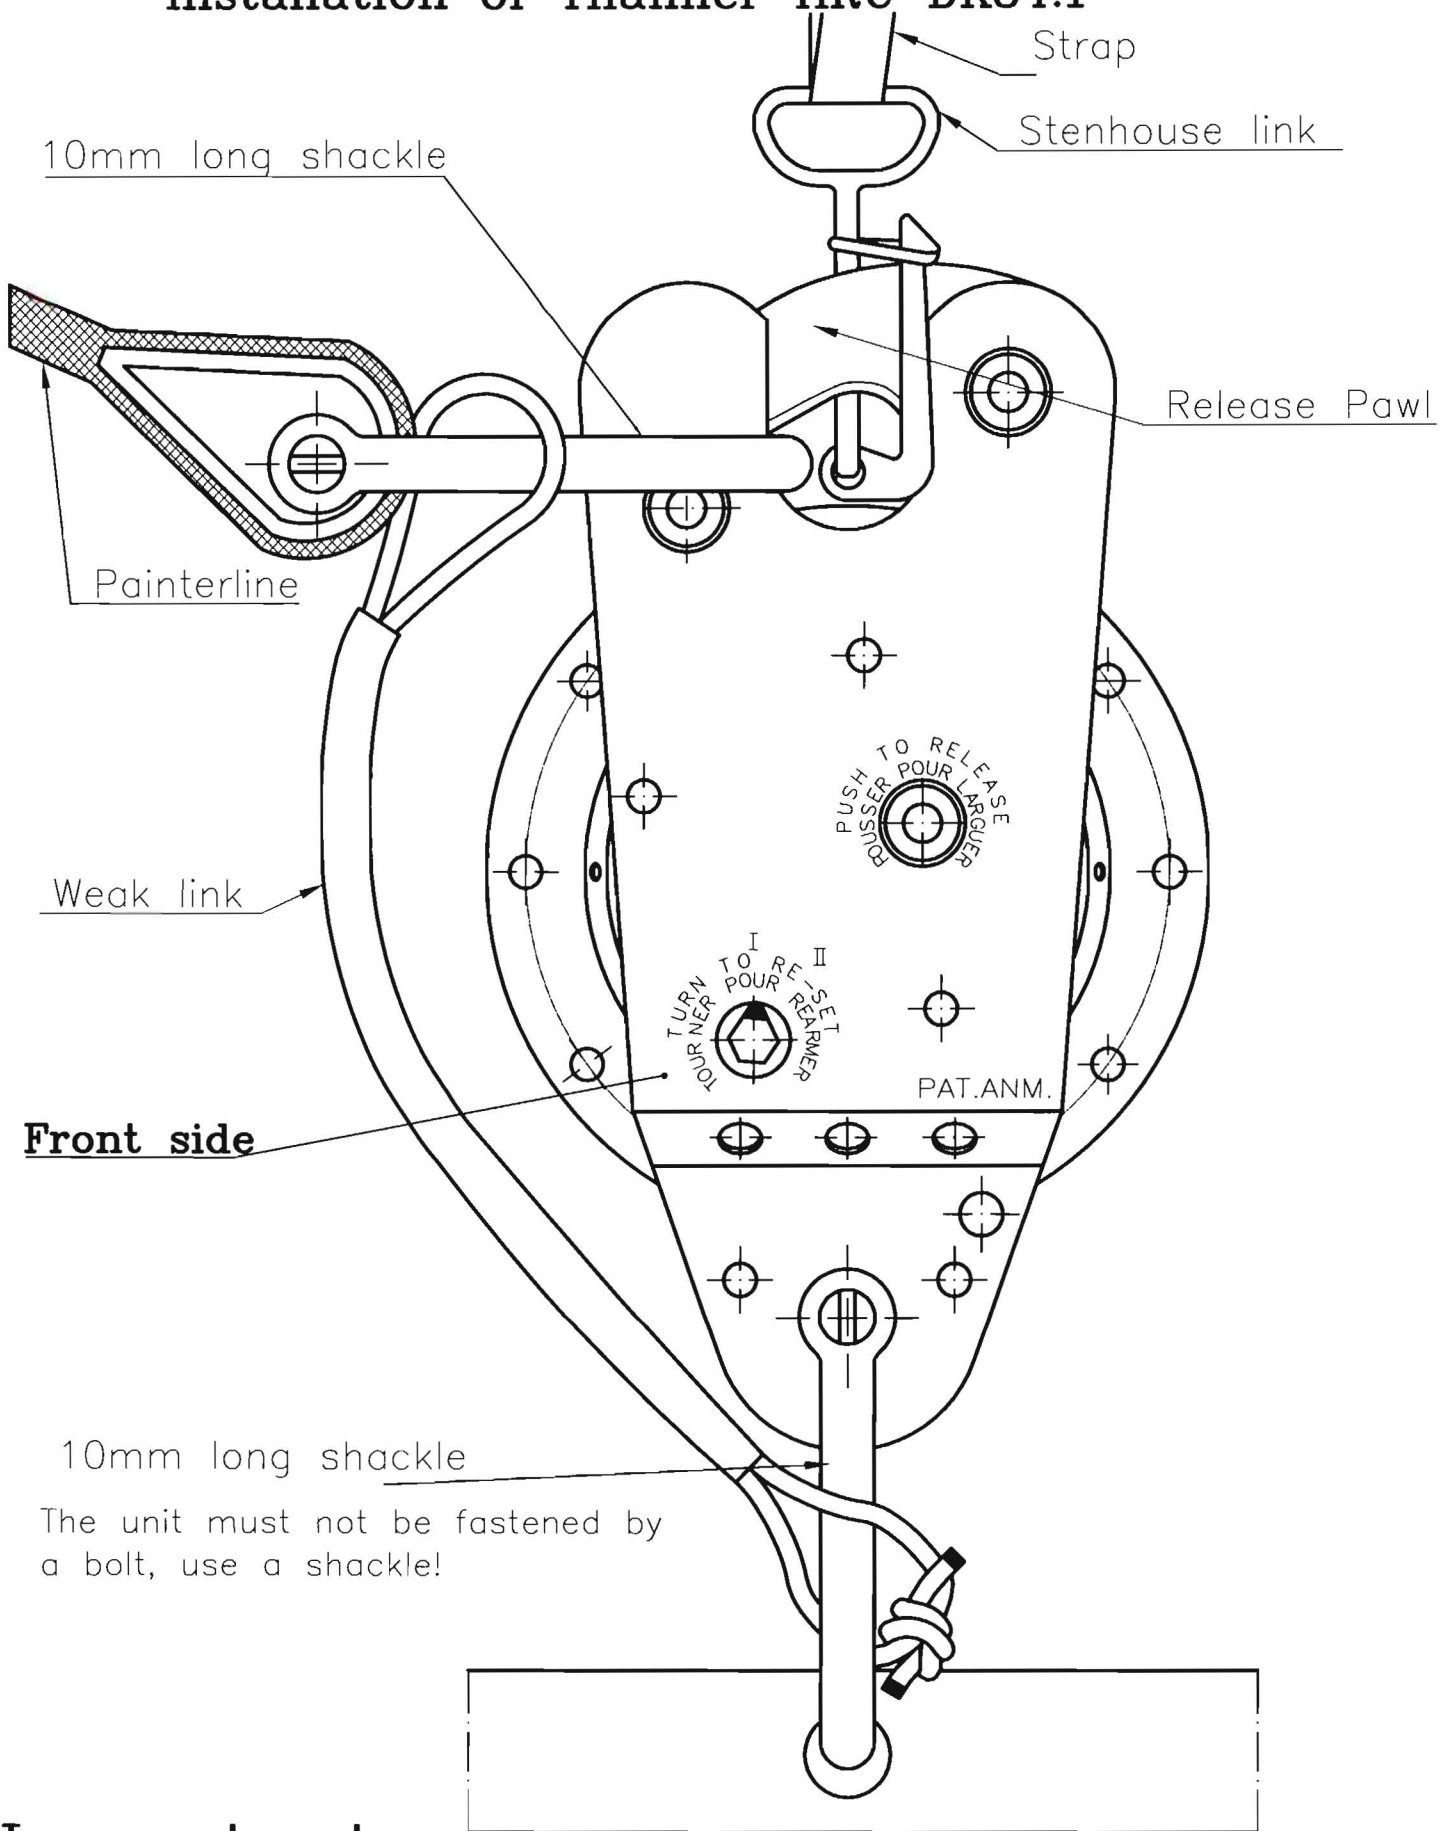

Important:

1. Stenhouse link must be fitted under release pawl.
2. Weak link, shackle and painterline must be connected as shown.

28 AUG. 2013